


Operation & Maintenance Instructions

All components received must be checked against packing slip within one week after receipt of goods

1. Verify that the damper is completely in the open position when connected to the ductwork. (Do not force blade to open/close. To properly adjust, connect battery pack to termination near damper motor plate and actuate switch UP or DOWN accordingly.)
2. Secure PLENUM cable through wire tie and tighten accordingly (see Fig. 1-A) Plug RJ-11 end into termination point on damper motor plate.
3. Check that PVC motor cover is installed. Please consult factory if missing or damaged.
4. Replace battery in hand held battery pack as necessary.
5. Keep damper motor away from any direct contact of moisture or debris.
6. Do not lubricate any components of the Power/Balance System™ All Nylon 6/6 bushings are permanently lubricated. Clean damper and components with compressed air only.
7. Any cable not purchased from United Energetech will void warranty of the damper and all related components.
8. Power/Balance motor does not require any scheduled maintenance over lifetime of damper.

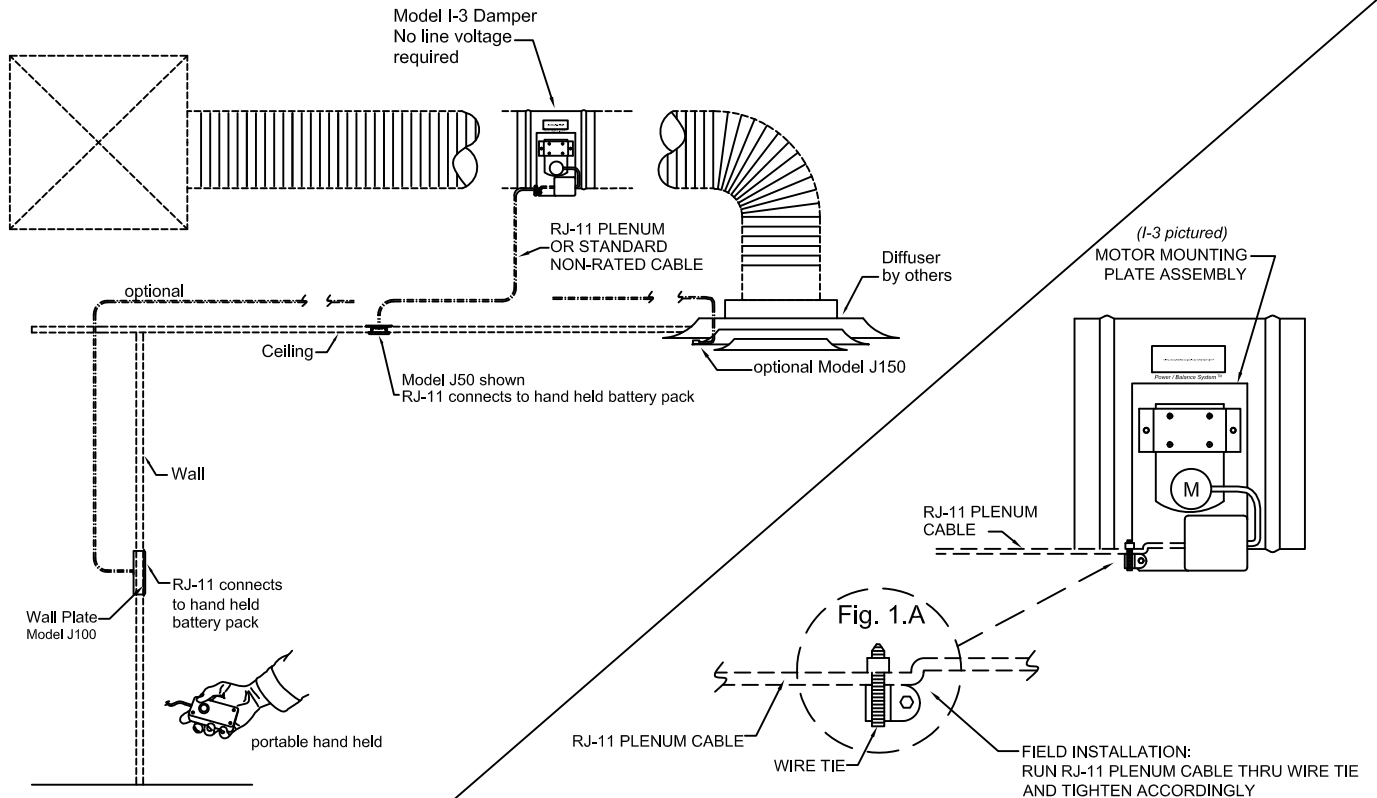

Job Name:	Operation & Maintenance Instructions		
Location:	Power/Balance i-3 / i-4 / i-5 / i-6 / Hi-i-3		
Architect:	DRAWN BY:	DATE:	REV. DATE:
Engineer:	SRB	2-23-07	11-5-10
Contractor:	REV. NO.	APPROVED BY:	DWG. NO.:
	9	BGT	E-6